

20-GH40D1-2



# Return Air / Service Wall Panel

For Air Handler Models  
JMM4, JMM5


## Return Air / Service Wall Panel - BAYTMMWALLPNLS/1

### FEATURES

- FRAMED, LOUVERED PANEL FOR WALL MOUNT APPLICATIONS
- WHITE FINISH, INCLUDES ACCESS PANEL FRAME AND ACCESS PANEL
- BAYTMMWALLPNLS - Single Pack
- BAYTMMWALLPNL1 - Pack of 20

### Installation Instructions

1. Ensure there is a structural frame to mount the sheet metal frame. See the frame rough opening dimensions.
2. Secure the metal frame to the wall using the (8) #10-1¼" screws provided. The frame should be oriented with the clips at the top of the frame.  
NOTE: Do not use the 1 ¼ " long screws in the holes with clips.
3. Place the tabs of the louvered panel into the bottom slots of the frame.
4. Secure the louvered panel to the frame using the (2) #10- ¾" white screws provided.

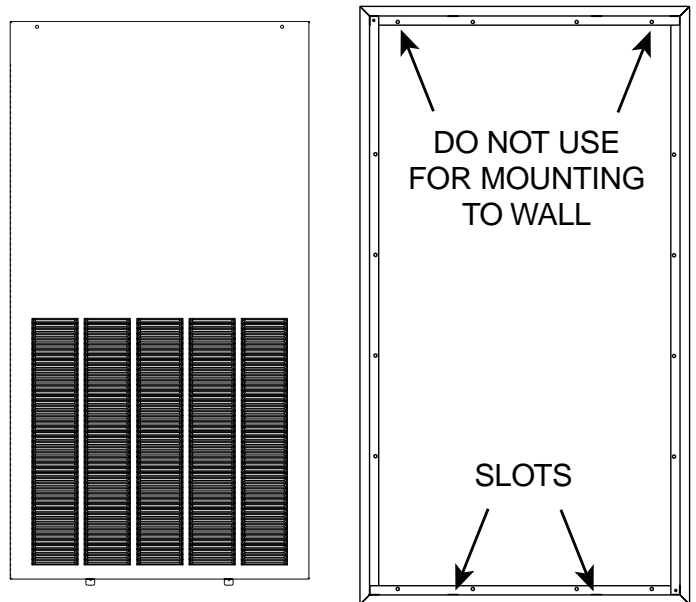

BAYTMMWALLPNLS (Single)  
BAYTMMWALLPNL1 (Pack of 20)

All Dimensions in Inches	Frame Outer Dimensions		Frame Rough Opening Dimensions		Air Handler Models	Style
	W	H	W	H		
BAYTMMWALLPNLS/1	25.81	46.81	22.81	43.81	JMM4 JMM5	Louvered